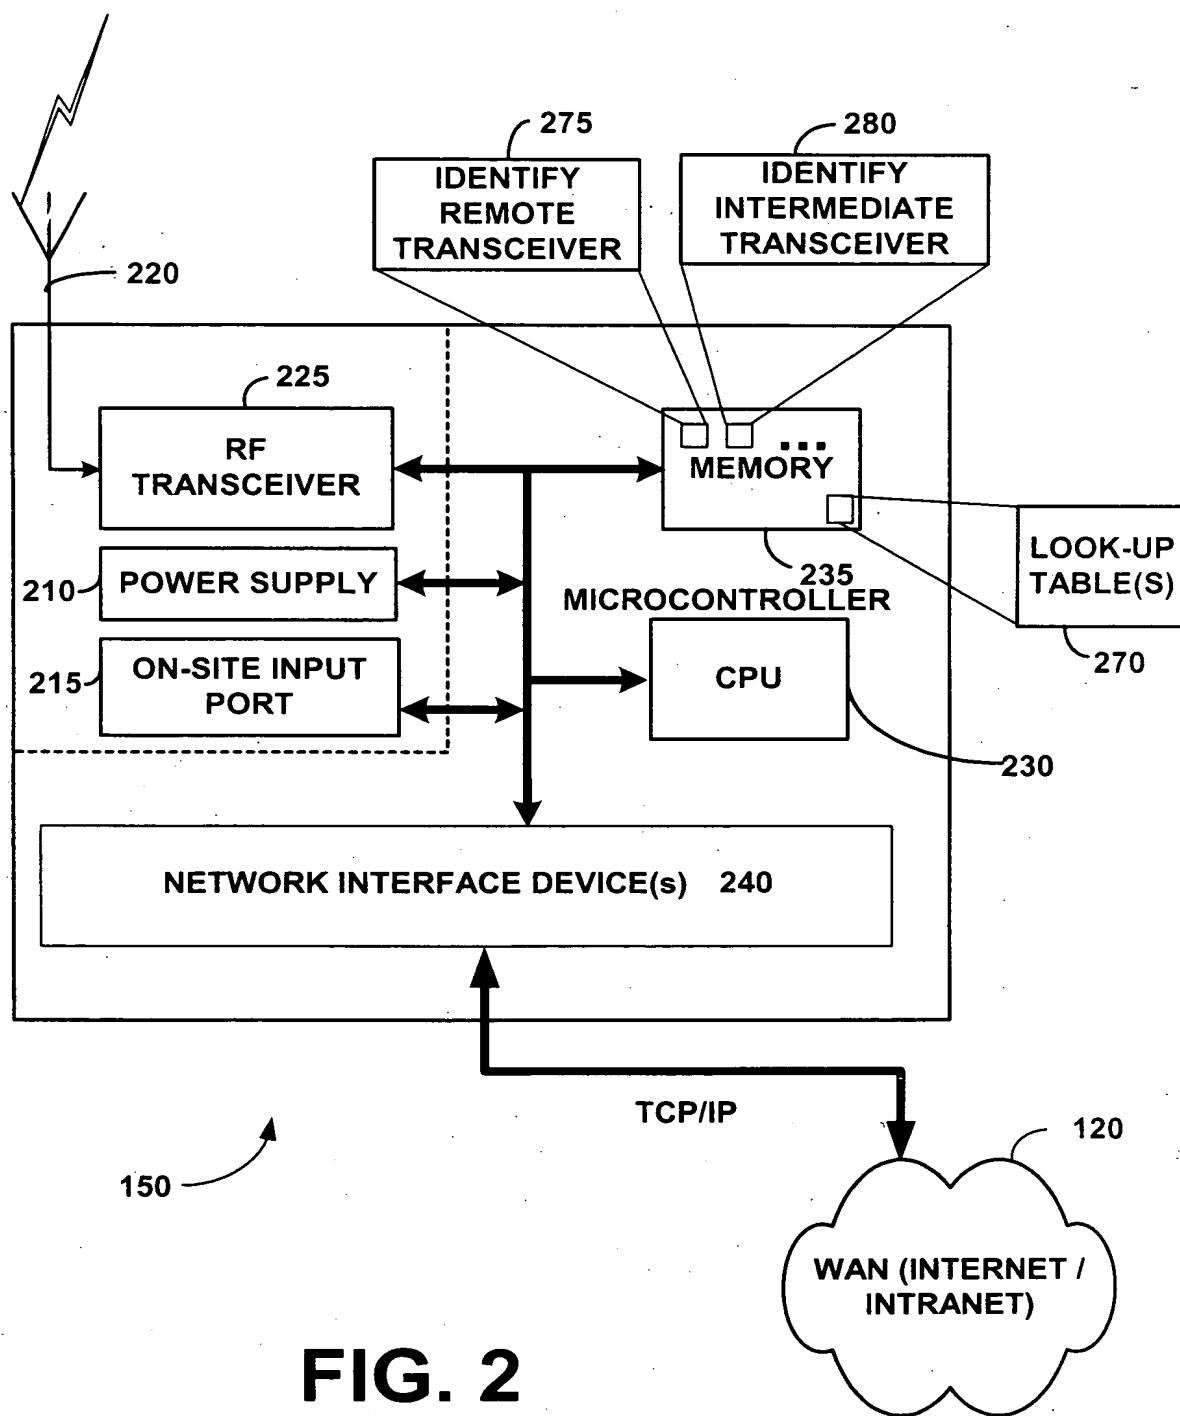
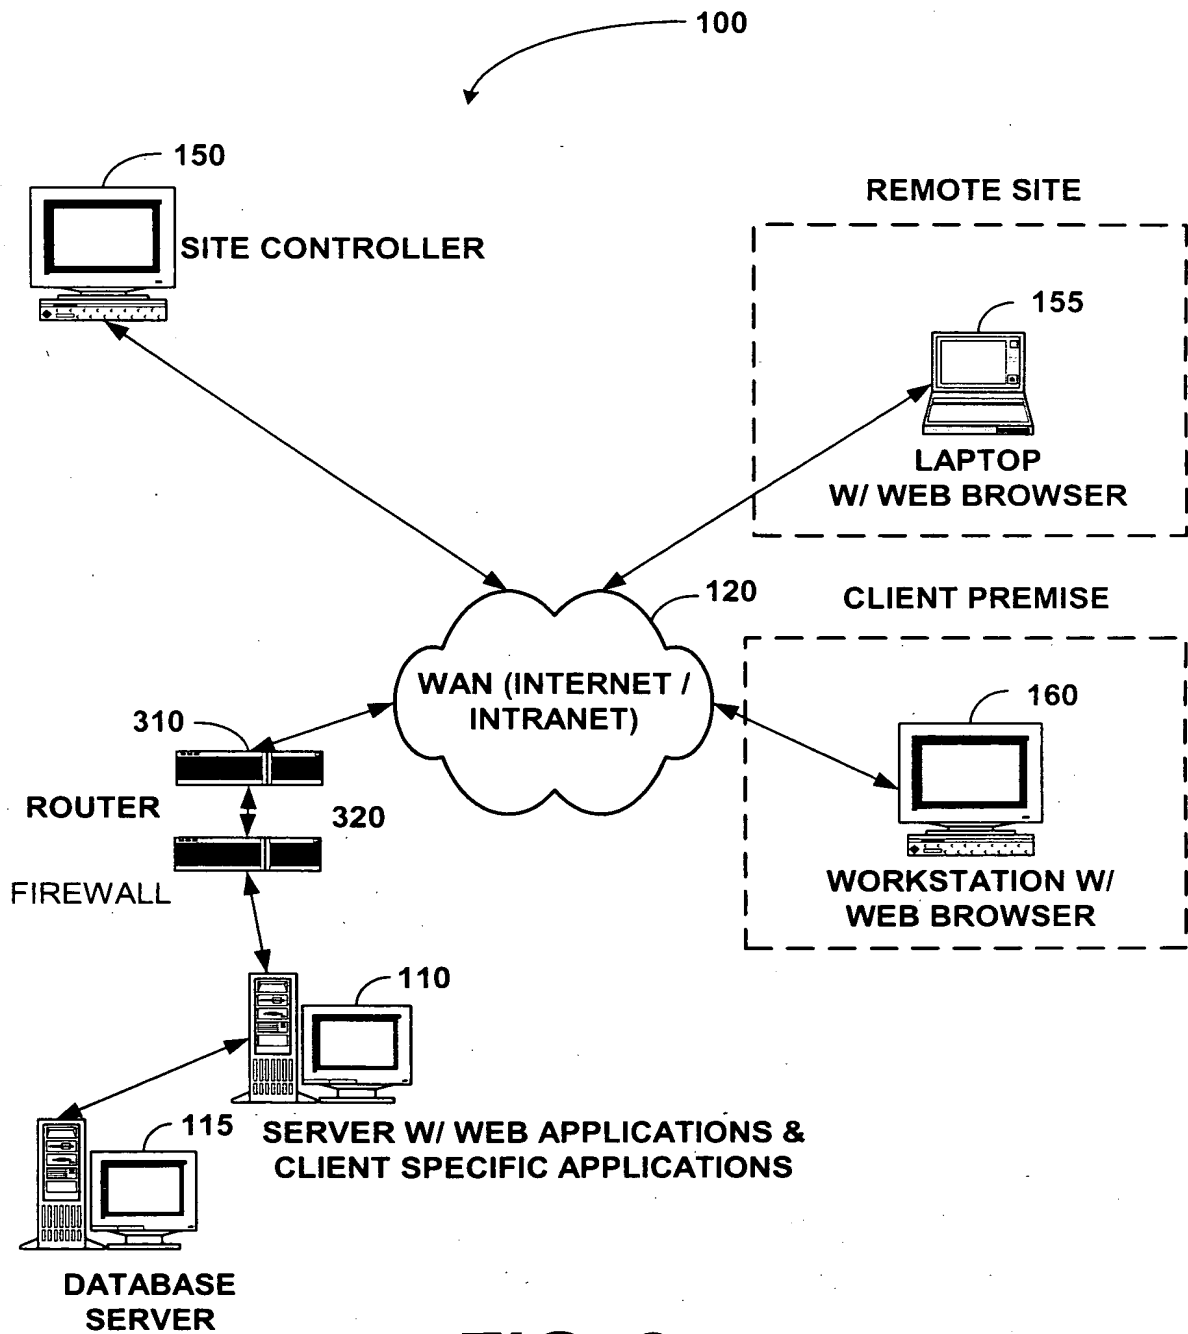


FIG. 1

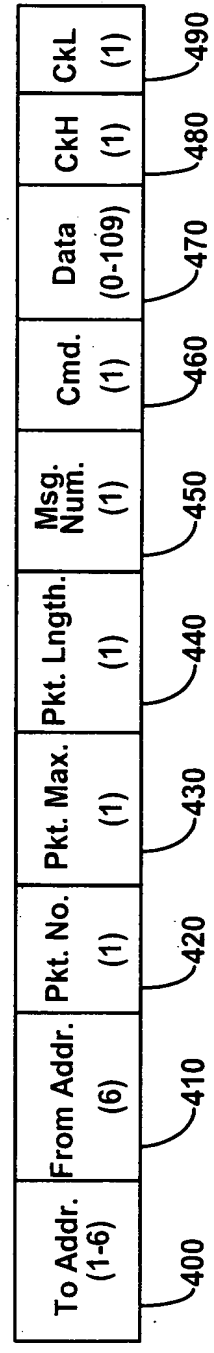


**FIG. 2**



**FIG. 3**

FIG. 4 Message Structure



**"To Address"**

**- Byte Assignment:**

|   |   |
|---|---|
| <b>MSB - Byte 1</b><br><b>Device Type</b>       | <b>FF-F0 (16) - Broadcast All Devices (1 Byte Address)</b><br><b>EF-1F (224) - Device Type Base (2 to 6 Byte Address)</b><br><b>0F-00 (16) - Personal Transceiver Identification (6 Byte Address)</b> |
| <b>Byte 2</b><br><b>Mfg./Owner ID</b>           | <b>FF-F0 (16) - Broadcast all Devices (Byte 1 Type)</b><br><b>(2 Byte Broadcast Address)</b><br><b>EF-00 (240) - Mfg./Owner Code Identification Number</b>  |
| <b>Byte 3</b><br><b>Mfg./Owner Extension ID</b> | <b>FF-F0 (16) - Broadcast all Devices (Byte 1 &amp; Byte 2 Type)</b><br><b>(3 Byte Broadcast Address)</b><br><b>EF-00 (240) - Device Type/Mfg./Owner Code ID Number</b>                               |
| <b>Byte 4</b>                                   | <b>FF-F0 (16) - Broadcast all Devices (Byte 1 &amp; Byte 2 Type)</b><br><b>(4 Byte Broadcast Address)</b><br><b>EF-00 (240) - ID Number</b>   |
| <b>Byte 5</b>                                   | <b>(FF-00) 256 - Identification Number</b>  |
| <b>Byte 6</b>                                   | <b>(FF-00) 256 - Identification Number</b>  |

**FIG. 5**

## Sample Messages

Central Server to Personal Transceiver - Broadcast Message - FF (Emergency)

Byte Count = 12

|                  |                          |                  |                   |                     |              |             |             |
|------------------|--------------------------|------------------|-------------------|---------------------|--------------|-------------|-------------|
| To Addr.<br>(FF) | From Addr.<br>(12345678) | Pkt. No.<br>(00) | Pkt. Max.<br>(00) | Pkt. Lngth.<br>(0C) | Cmd.<br>(FF) | CkH<br>(02) | CkL<br>(9E) |
|------------------|--------------------------|------------------|-------------------|---------------------|--------------|-------------|-------------|

600

First Transceiver to Repeater (Transceiver)  
Broadcast Message - FF (Emergency)

Byte Count = 17

|                  |                          |                  |                   |                     |              |  |             |             |
|------------------|--------------------------|------------------|-------------------|---------------------|--------------|--|-------------|-------------|
| To Addr.<br>(F0) | From Addr.<br>(12345678) | Pkt. No.<br>(00) | Pkt. Max.<br>(00) | Pkt. Lngth.<br>(11) | Cmd.<br>(FF) |  | CkH<br>(03) | CkL<br>(A0) |
|------------------|--------------------------|------------------|-------------------|---------------------|--------------|--|-------------|-------------|

602

Data  
(A000123456)

Note: Additional Transceiver Re-Broadcasts do not change the message.  
The messages are simply received and re-broadcast.

Message to Device "A0" From Device "E1" Command - "08" (Respond to PING)  
Response will reverse "To" and "From" Addresses

Byte Count = 17

|                          |                            |             |                |                  |              |              |             |             |
|--------------------------|----------------------------|-------------|----------------|------------------|--------------|--------------|-------------|-------------|
| To Addr.<br>(A012345678) | From Addr.<br>(E112345678) | P #<br>(00) | P Max.<br>(00) | P Lngth.<br>(11) | Cmd.<br>(08) | Data<br>(A5) | CkH<br>(04) | CkL<br>(67) |
|--------------------------|----------------------------|-------------|----------------|------------------|--------------|--------------|-------------|-------------|

604

**FIG. 6**

09925786 080901  
106080" 99752560

